




BANDANA FX

INSTRUCTIONS:

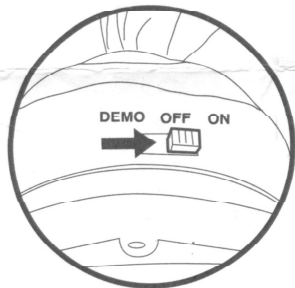

Turn on & light up the bandana.



Motion activates 4 unique character phrases!

To replace batteries:

- 1). Remove screw from battery cover and remove battery cover door.
- 2). Replace batteries with two new "AAA" batteries.
- 3). Replace cover and replace screw.

Battery Regulations:

- do not mix old and new batteries,
- do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.


This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

To Reset: Slide the switch to "Off" position.

Battery Instructions:

- do not use rechargeable batteries;
- non-rechargeable batteries are not to be recharged;
- different types of batteries or new and used batteries are not to be mixed;
- only batteries of the same or equivalent type as recommended are to be used;
- batteries are to be inserted with the correct polarity;
- exhausted batteries are to be removed from the toy;
- the supply terminals are not to be short-circuited.

Under the environment with severe electrostatic discharge, the product may malfunction and requires user reset.

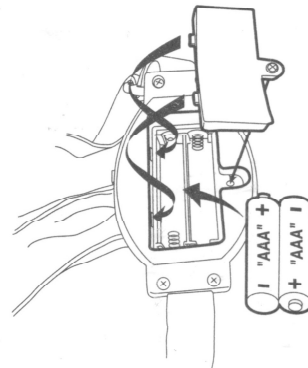

Age 4 and up

Playmates

ASST. NO. 54800
STOCK NO. 54801-54804

Teenage Mutant Ninja Turtles® © 2006 Mirage Studios, Inc. Teenage Mutant Ninja Turtles®, Leonardo®, Michelangelo®, Raphael®, Donatello®, Splinter®, Shredder®, and Foot Soldier™ are registered trademarks of Mirage Studios, Inc. All Rights Reserved. PRINTED IN CHINA.