




## DON VS GENERAL MONO INSTRUCTIONS:

Press button on General Mono's  
back to see his evil energy glow red!

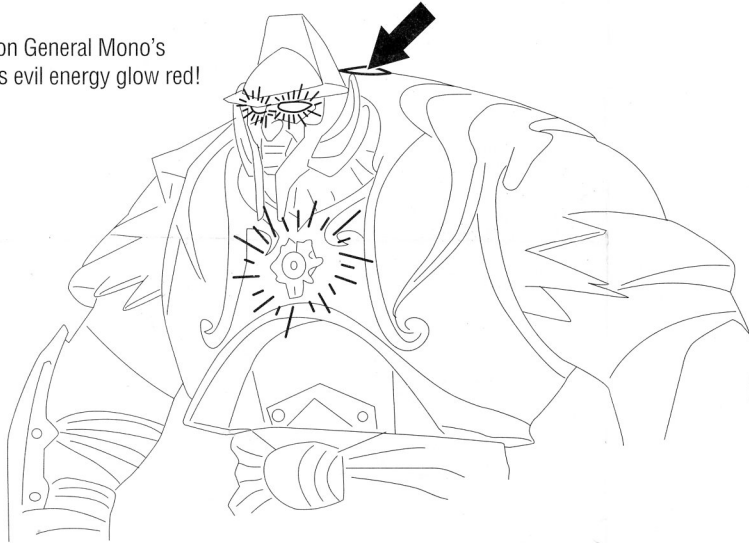

### To replace batteries:

- 1). Remove screw from battery cover and remove battery cover door.
- 2). Replace batteries with two new "AG13" button cell batteries.
- 3). Replace cover and replace screw.

### Battery Regulations:


- do not mix old and new batteries,
- do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### Battery Instructions:

- do not use rechargeable batteries;
- non-rechargeable batteries are not to be recharged;
- different types of batteries or new and used batteries are not to be mixed;
- only batteries of the same or equivalent type as recommended are to be used;
- batteries are to be inserted with the correct polarity;
- exhausted batteries are to be removed from the toy;
- the supply terminals are not to be short-circuited.

Under the environment with severe electrostatic discharge, the product may malfunction and requires user reset.

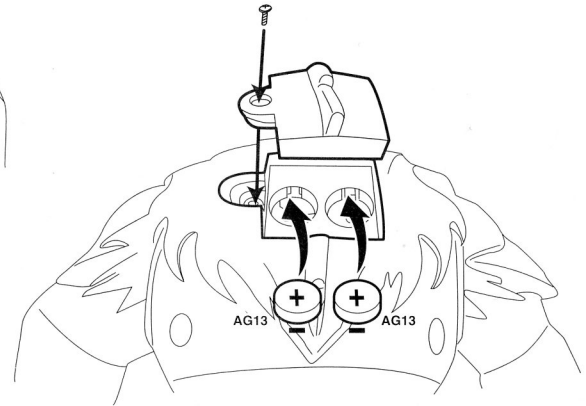

Age 4 and up

**Playmates®**

ASST. NO. 55510  
STOCK NO. 55512

Teenage Mutant Ninja Turtles and TMNT are trademarks of Mirage Studios, Inc. Teenage Mutant Ninja Turtles®, Leonardo®, Michelangelo®, Raphael®, Donatello®, Splinter®, Shredder®, and April O'Neil® are registered trademarks of Mirage Studios, Inc. All Rights Reserved. PRINTED IN CHINA.



**WARNING: CHOKING HAZARD**

Small parts. Not for Children under 3 years.