

To transform into a Double Blade Sword, press on lever to open and release to close. (see diagram B)

Place labels 1-3 as shown.

Diagram B

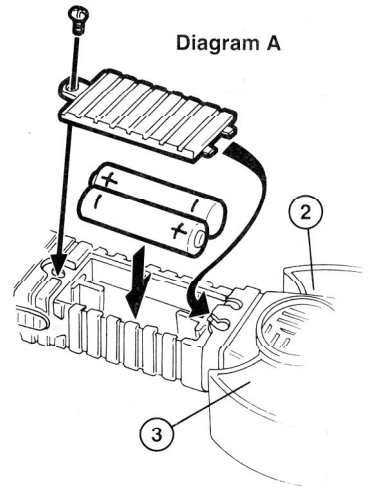


Diagram A

To insert batteries, unscrew battery compartment lid with a Phillips screw driver. Lift cover up and slide tabs out of the slots to remove. Insert 2 AAA batteries. Replace lid by fitting the two tabs back into the slots, close and replace screws. (see diagram A)

- do not use rechargeable batteries;
- non-rechargeable batteries are not to be recharged;
- different types of batteries or new and used batteries are not to be mixed;
- only batteries of the same or equivalent type as recommended are to be used;
- batteries are to be inserted with the correct polarity;
- exhausted batteries are to be removed from the toy;
- the supply terminals are not to be short-circuited.

Diagram C

To activate sword sound, push the sound button located on opposite side of the lever on the handle of sword. (see diagram C)

STOCK NO. 33131  
AGES 4 AND UP



©1997 Playmates Toys Inc. Distributed by Playmates Toys Inc. 611 Anton Blvd., Suite 600, Costa Mesa, CA 92626. Exclusively licensed by Surge Licensing. Printed in China.

**WARNING: CHOKING HAZARD**  
Small parts. Not for Children under 3 years.